

型号说明

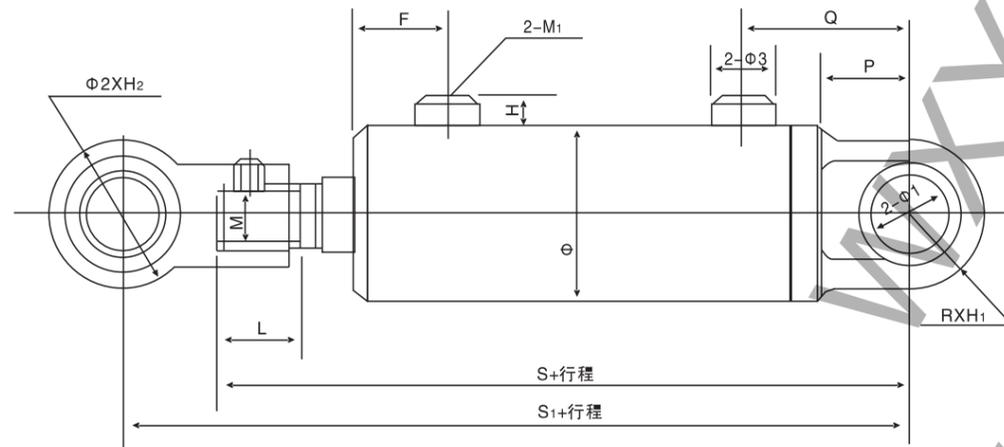
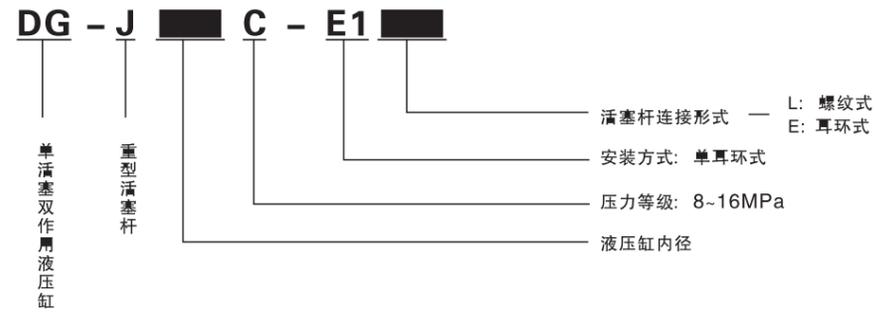


表16

液压缸内径D	Φ	M	L	Φ2×H2	2-Φ1	R×H1	2-Φ3	2-M1	F	H	P	Q	S	S1
50	70	M24×1.5	33	56×40	20	25×28	30	M18×1.5(G3/8)	52	15	32	65	242	272
63	83	M30×2	36	60×60	32	30×40	35	M22×1.5(G1/2)	67	15	35	70	272	310
80	102	M42×2	42	80×75	40	40×50	35	M22×1.5(G1/2)	70	15	50	85	308	359
100	127	M48×2	62	100×95	50	50×63	45	M27×2(G3/4)	81	20	60	102	369	427
110	140	M56×2	70	115×105	55	55×75	45	M27×2(G3/4)	85	20	65	118	404	472
125	159	M64×3	73	124×118	63	62×80	45	M27×2(G3/4)	90	20	70	129	421	486
140	168	M72×3	75	130×125	65	71×80	55	M33×2(G1)	95	20	80	144	460	540
150	185	M80×3	80	140×135	71	80×85	55	M33×2(G1)	101	20	81	145	481	565
160	194	M80×3	85	160×145	80	90×95	55	M33×2(G1)	115	20	90	168	528	613
180	219	M90×3	95	179×160	90	100×105	65	M42×2(G1,4)	126	20	105	185	606	716
200	245	M100×3	105	184×170	100	100×120	65	M42×2(G1,4)	157	20	110	200	680	800
220	273	M110×3	112	200×120	100	200×120	65	M42×2(G1,4)	157	20	120	200	693	811
250	299	M125×4	125	220×130	110	110×136	65	M42×2(G1,4)	157	20	130	210	716	831
320	402	M160×4	166	280×170	140	140×176	70	M48×2(G1,4)	200	24	160	264	847	1017